



1	GB894.1 (25)	轴衬 M16x25	6
2	SF-2 (D5X20)	衬套 D5X20	6
3	QVZ30C1-03	衬套	4
4	QVZ30D3-05	衬套	4
5	QVZ30D3-02	衬套 M10X30	2
6	GB8781-86 (M10X30)	衬套 M10X30	8
7	GB95-85 (10)	衬套 10	8
8	GB93-87 (10)	衬套 10	8
9	GB6170 (M10)	螺母 M10	8
10	GB5781-86 (M12X35)	螺母 M12X35	8
11	GB95-85 (12)	衬套 12	8
12	GB93-87 (12)	衬套 12	8
13	GB6170 (M12)	螺母 M12	8
14	QVZ30D3-01	衬套	2
15	GB/T 898.1-2000 (M6)	螺母 M6	4
16	GB/T 96.2-2002 (6)	垫圈 6	4
17	QVZ30D3-04	衬套	2
18	GB918-85 (M6X12)	螺母 M6X12	3
19	GB95-85 (6)	衬套 6	3
20	MC-9107	衬套 5	3
21	QVZ30D3-03	衬套	1
22	GB818-85 (M4X12)	螺母 M4X12	4
23	GB95-85 (4)	衬套 4	4
24	QVZ30D3.1	衬套	4
25	QVZ30D3-06	衬套	1
26	QVZ30D3-07	衬套	1
27	QVZ30D1	衬套	2
28	GB 91	衬套	2
29	QVZ30C-04	衬套	2
30	QVZ30C-05	衬套	2
31	GB8074 CH1244-113J	螺母 M16	2
32	QVZ30C-02	衬套	2
33	GB6170 (M16)	螺母 M16	12
34	QVZ30D1-02	衬套	2
35	QVZ30C3-11	衬套	2
36	GB92-77 (14)	衬套 M14	1
37	QVZ30S3-05	衬套	1
38	QVZ30D3-03	衬套	1
39	QVZ49D53-06	衬套	1
40	QVZ30C3-05	衬套	2
41	QVZ30D5-01	衬套	1
42	QVZ30C3-04	衬套	2
43	QVZ30C3-03	衬套	16
44	QVZ30C7	衬套	2
45	GB97.1 (8)	垫圈 8	2
46	GB170 (M8)	螺母 M8	2
47	GB6170 (M8)	螺母 M8	2
48	QVZ30C7-07	衬套 M8X25	2
49	QVZ30C7-05	衬套	2
50	QVZ30C7-06	衬套	2
51	GB8414.11-84 (M10X25)	螺母 M10X25	4
52	QVZ30C4-07	衬套	4
53			
54			
55	QVZ30D2-01	衬套	4
56	GB879-86 (5X35)	垫圈 5X35	8
57	QVZ30C2-02	衬套	4
58	QVZ30D2-02	衬套	4
59	QVZ30C2-01	衬套	2
60	GB918-85 (M8X15)	螺母 M8X15	8
61	QVZ30C-01	衬套	4
62	GB 894 (38)	轴衬 M38	4
63	GB/T701 CH10X20	螺母 M10X20	12
64	QVZ30C4-04	衬套	4
65	QVZ30C4.2	衬套 M10X12	4
66	GB/T70.3 (M10X12)	螺母 M10X12	4
67	QVZ30C4-02	衬套	8
68	GB95-85 (M8X16)	螺母 M8X16	8
69	QVZ30C4-03	衬套	4
70	QVZ30C4.3	衬套	4
71	QVZ30C4-01	衬套	4
72	QVZ30C4-06	衬套	4
73	QVZ30C4.1	衬套	4
74	GB894.1-86 (50)	轴衬 50	4
75	QVZ30C4-05	衬套	4
76	QVZ30D2	衬套 M16x25	4
77	QVZ30D5-02	衬套	2
78	QVZ30D-01	衬套	1
79	QVZ30D-02	衬套	2
80	GB818 (M6X8)	十字槽螺母 M6X8	6